

2.1.1. Introduction

There are two main statuses: **User** and **Administrator**.

1. User status.

- 1.1. Receives an invitation from the Administrator to join the company via email.
- 1.2. Receives a License from the Administrator.
- 1.3. Starts working.

2. Administrator status.

- 2.1. Creates and registers their own account.
- 2.2. Creates Companies and Projects.
- 2.3. Invites Users to the Company.
- 2.4. Sends a license request to the Vendor.
- 2.4. Distributes licenses to Users.
- 2.5. Starts working.

When an Administrator creates a Company, he becomes its Owner and Administrator. They can add other Users as Owners and/or Administrators. Added Owners can remove the Company's initial creator. This might be applicable in cases where a user, acting as technical support, creates and configures the Company, and their role ends there.

Permissions	Owner Image-1686736679374.png	Administrator Image-1686736692395.png	User Image-1686736718281.png
Add or remove users from the Company	+	+	-
Assign or remove licenses to users	+	+	-

Create a project and add users	+	+	-
Assign owner statuses to other users	+	-	-

**One account can create no more than two Companies.*

Revision #5
Created 3 May 2024 10:44:01 by SIGNAX SUPPORT
Updated 9 May 2024 14:02:19 by SIGNAX SUPPORT