


# 13\_Video stream

**13\_Video Stream** - allows tracking production processes on the construction site in real-time.

Displaying the Card in User Mode

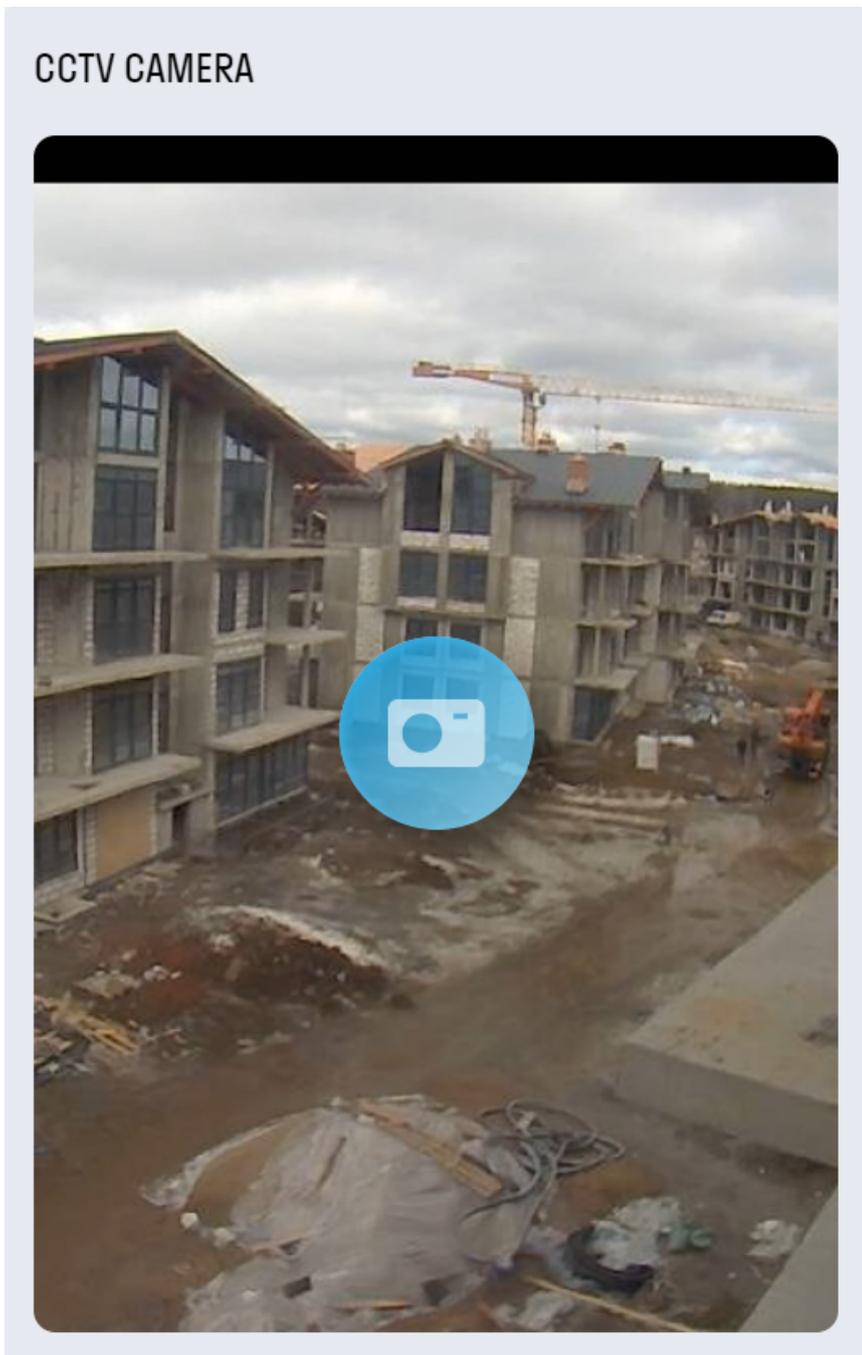

## Card Configuration

## 1. RTSP Tab

Specify the link to the video stream in RTSP format.

Enter card data ✕

RTSP  RTSP.ME

NAME

HD STREAM

SD STREAM

Show broadcast

- **In the "Name" field**, enter the name of the video stream.
- **In the "HD Stream" field**, insert the link to the video stream in RTSP format for high-quality streaming.
- **In the "SD Stream" field**, insert the link to the video stream in RTSP format for low-quality streaming.
- **The "Display Stream" switch** allows selecting from which tab to display the stream in the card: from RTSP or RTSP.ME.

## 2. RTSP.ME Tab

If your video stream is hosted on the RTSP.ME website, specify the link from this site in RTSP.ME format.

Enter card data ✕

RTSP  RTSP.ME

NAME

STREAM

PREVIEW

Show broadcast

- **In the "Name" field**, enter the name of the video stream.
- **In the "Stream" field**, insert the link to the video stream in RTSP.ME format.
- **In the "Preview" field**, place an image for the card preview. The "Display Stream" switch allows selecting from which tab to display the stream in the card: from RTSP or RTSP.ME.

# Stream view

When viewing the card in user mode, you can switch between two video stream qualities:



Viewing mode in HD quality (high-quality format).



When deselecting the checkbox, the viewing quality becomes low.

---

Revision #5

Created 23 May 2022 06:02:18

Updated 9 May 2024 08:34:13 by SIGNAX SUPPORT